

FREDLIN CANOPY HOIST ASSEMBLY PAPER

1




1. Open two 45° panels on the end of long channels as shown. The short channels facing the inside.

2




2. Use two M6 x 10 screws. Insert screws from the inside.

3

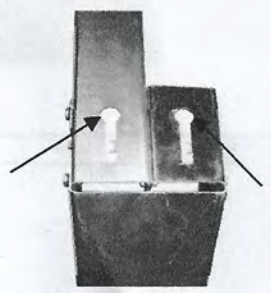


3. Mount the one channel to the roof, using the 3 holes as shown in picture 3 & 4. Make sure the short channel is in the middle as shown in picture 5.

4

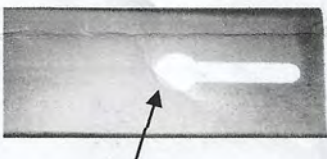

5

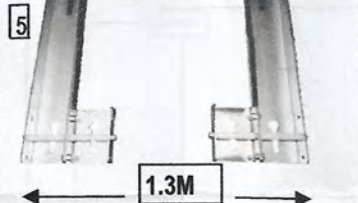


4. Measure 1.3m from outside to outside and mount the other channel as shown in picture 5.

6




5. Mount gear system with gear on left hand side of picture 5.

7

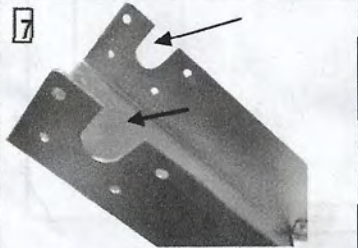

6. Ensure nylon bush shoulder is on the inside.

8

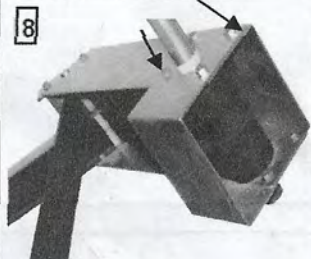

7. Secure this bracket with eight M6 x 10

NOTES

1. Lubricate all four nylon bushes with oil
2. Lubricate the two steel bushes of the worm with oil
3. Grease the gears with WB Grease
4. NB - Never turn the entire belt down
5. NB - always turn anti-clock wise for upwards.
6. It is easier to first mount the one channel measure 1.3M and mount the other channel.

9




8. Secure the gear bracket with eight M6 x 12 screws

1



9. Thread belt as indicated

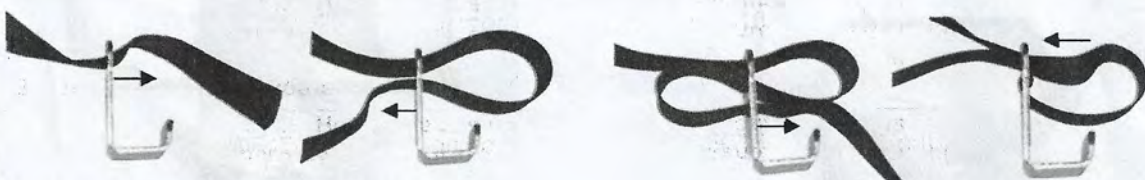

NOTE !!!!! Hooks are design to work in the upright position as shown. If use in any other way , it is your responsibility to make sure the belt is not going to slip.

